


Tension the Conveyor Belt

1. For the belt tension ,normally ,we adjust the front side first .
2. Put the belt in the middle of roller



3. Adjust the roller tension : keep both 25 - 30mm ,

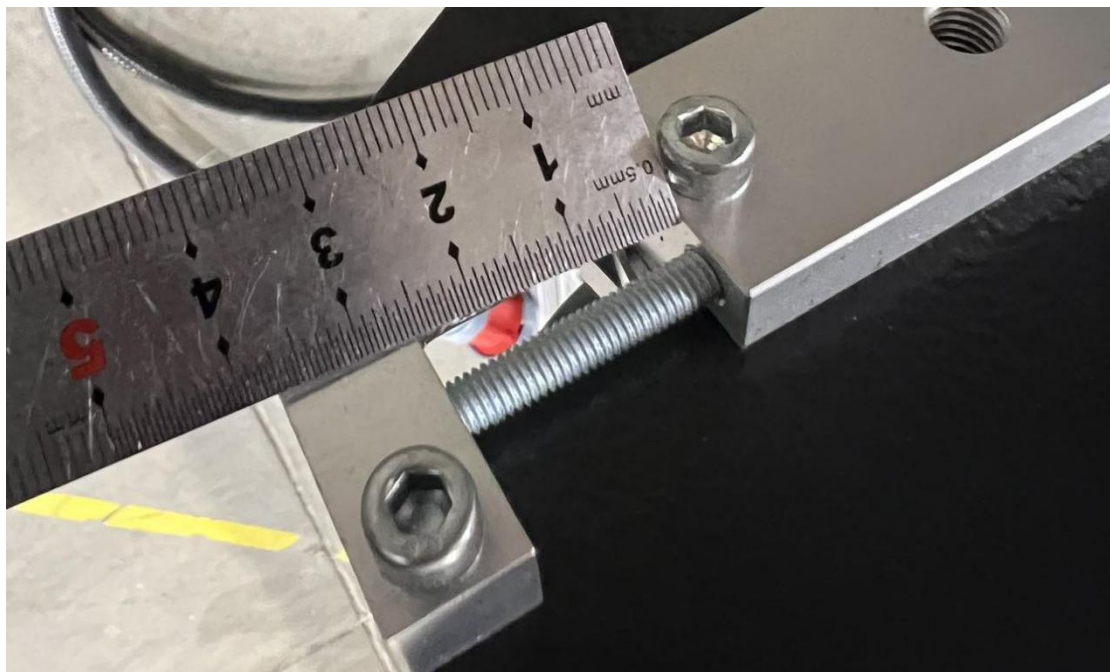

4. Back side the roller .also put the belt in the middle of roller , and then depends on the belt moving to adjust the back side screw .



