



SG2/VG2

Replacing the Separating Knife


Replacing the Separating Knife

If the separating knife becomes dull, replace it.

⚠ CAUTION

Be sure to perform operations as specified by the instructions, and never touch any area not specified in the instructions. Otherwise sudden movement of the machine may cause injury.

Do not touch the tip of the separating knife. Doing so may result in injury.

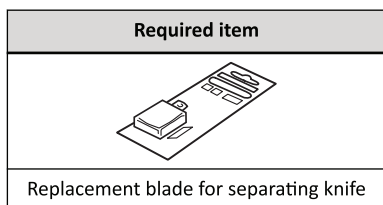

1. Remove any media
2. Press [Menu]
3. Press [▼] several times to display this screen



4. Press [▶] once, and then press [▼] several times display this screen




5. Press [▶] once, and then press [▼] several times display this screen




6. Press [Enter]
7. When the message [Open Front Cover] is shown, open the front cover.
8. Remove the separating knife

- (1) Loosen the screw until it slips out.
- (2) Grasp the screw portion, and slowly pull in the direction of the arrow.
When doing this, do not pull it back toward you.

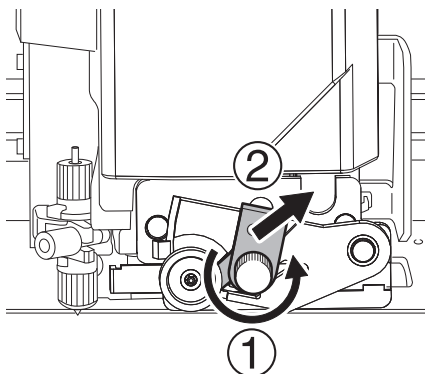


9. Install a new knife.

Slide the knife to align it with the groove (1). The knife is secured in place by the magnet (2).

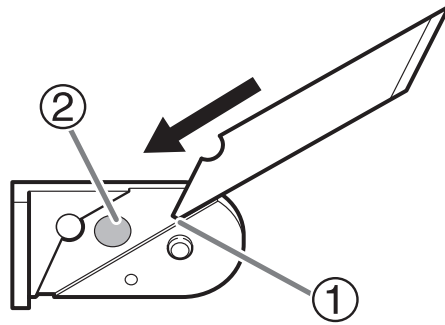


10. Slowly insert the knife into the groove.

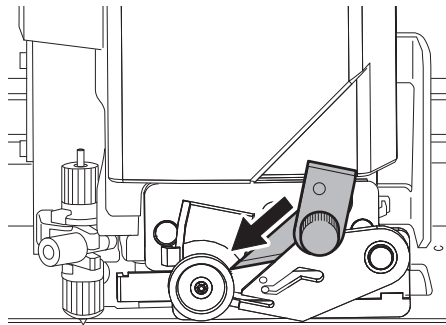

11. Tighten the screw

Take care to ensure the knife does not slip out of position at this time.

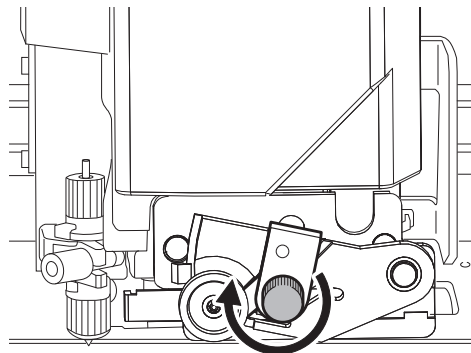

12. Close the front cover.

13. Press [Enter]

When the screen

MAINTENANCE	◀ ◆
REPLACE KNIFE	▶ ▽

 is displayed, the blade replacement is finished.

14. Press [Menu] to go back to the original screen.