



Machine Add SPRT

Encoder Wire And Power Wire Circuit Diagram:

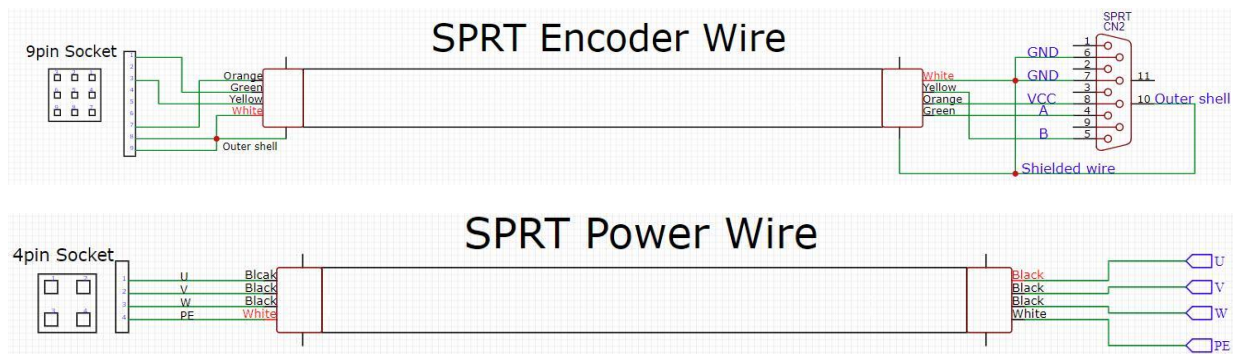


1. Power the driver


Connect the live wire, neutral wire and ground wire of other drivers or power distribution boxes to SPRT drivers in parallel

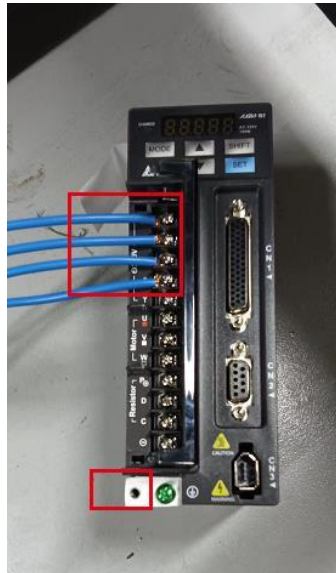

2. Install power line

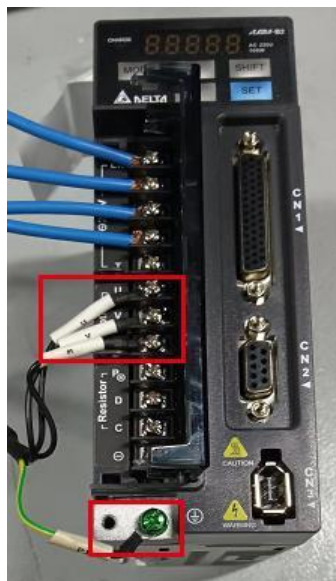

3. Install encoder cable and control connector cable

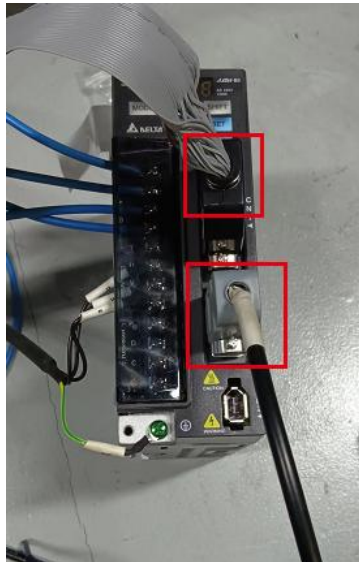


4. Sprt board connect to Epos board Z socket



5.SPRT tool connects power line and encoder line



6.SPRT board 'S' and 'A' connect to power board

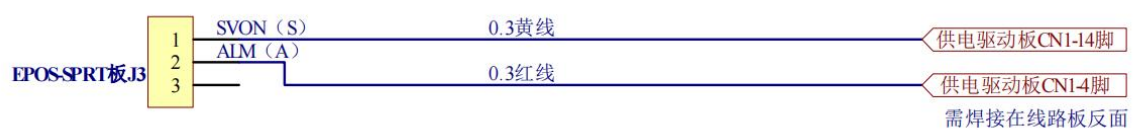

S connect to CN1-14pin

A connect to CN1-4pin