



SG2/VG2

Blade Holder Adjustment

Accurately adjust the blade extension


⚠ CAUTION

Be sure to perform operations as specified by the instructions, and never touch any area not specified in the instructions. Otherwise sudden movement of the machine may cause injury.

Do not touch the tip of the blade. Doing so may result in injury.


Making the amount of blade extension too small may cause the tip of the blade holder cap to touch, soil or damage the printed surface. It is important to be especially careful about this when you are using media that has poor ink adhesion properties.

The amount of blade extension (1) is 0mm (2) at minimum and (3) 2.5mm (98.4mil) is the maximum.

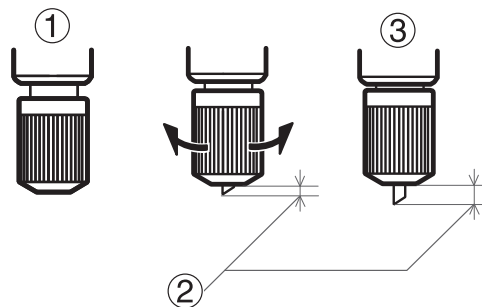


Rough estimate for the amount of blade extension (When creating a sticker)

Set the amount of blade extension (1) to an amount that is the sum of the thickness of the material portion (2) and half (4) the thickness of the backing paper (3).

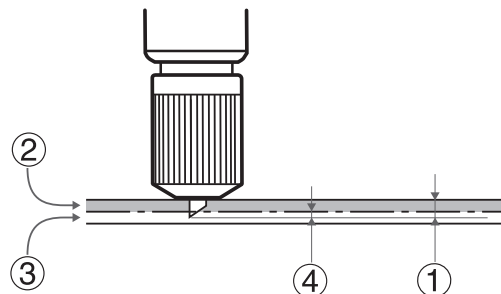

Rough estimate for the amount of blade extension (when cutting perforated lines)

Set the amount of blade extension (1) so that the blade pierces the media (2), the blade tip extends slightly.

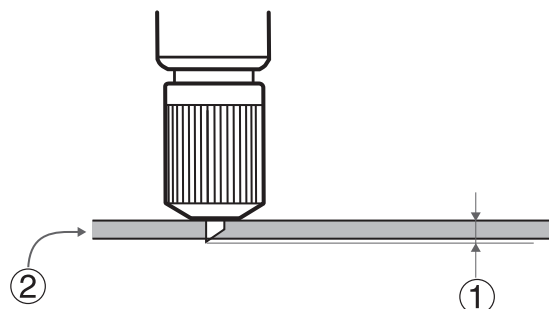

Important - Pushing the blade out too far will damage the blade and blade protector and hasten their deterioration, so exercise caution.